

# Airpura Limited Warranty

5 years on parts and 10 years labor

See [www.naturalsolutions1.com/airpura.htm](http://www.naturalsolutions1.com/airpura.htm) for details

# Airpura

AIR PURIFIERS



## Operating & Filter Replacement Directions

# H600

Thank You for choosing an  
Airpura High Efficiency Air Purifier  
To bring you the benefits of clean indoor air

### To Begin Using Your Airpura...

- Inspect the exterior of your Airpura to verify there is no damage from shipping. If any damage is noted please follow the instructions in the Airpura returns policy.
- Wipe the unit with a damp cloth to remove any dust from packaging
- Plug the unit into a regular grounded 110 volt outlet
- Turn on the unit to MAX and allow it to run for a few minutes
- Set the variable speed control to the level you wish
- The most efficient way to use your Airpura for regular air quality maintenance is to run it at a low speed 24 hours a day 7 days a week

To close the filter chamber



Replace the  
gasket



Position the  
indentation  
in the cover  
into the center of  
the HEPA filter



Replace the  
4 screws and  
tighten



Turn the  
Airpura  
back onto  
it's casters

Feel the difference breathing clean air makes  
to your health


# Filter Maintenance and Replacement

## The Pre-Filter

- Can be vacuumed from the exterior of the unit once a month or more often.
- Should be replaced at least after 12 months of use

### To vacuum the pre-filter

- Use the brush attachment on your vacuum cleaner
- Vacuum slowly around the mesh surface of the filter chamber

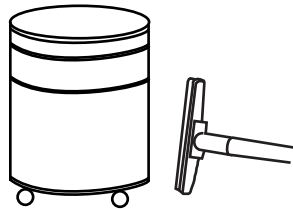

## The Hi-C Carbon Filter

- Should be changed as needed in heavy applications and at least every 4-6 months in normal use.

## The HEPA Filter

- Should be replaced at least every 5 years of normal use

### To open the filter chamber

