

Airpura Limited Warranty

5 years on parts and 10 years labor

See www.naturalsolutions1.com/airpura.htm for details

Airpura

AIR PURIFIERS



Operating & Filter Replacement Directions

H600

Thank You for choosing an
Airpura High Efficiency Air Purifier
To bring you the benefits of clean indoor air

To Begin Using Your Airpura...

- Inspect the exterior of your Airpura to verify there is no damage from shipping. If any damage is noted please follow the instructions in the Airpura returns policy.
- Wipe the unit with a damp cloth to remove any dust from packaging
- Plug the unit into a regular grounded 110 volt outlet
- Turn on the unit to MAX and allow it to run for a few minutes
- Set the variable speed control to the level you wish
- The most efficient way to use your Airpura for regular air quality maintenance is to run it at a low speed 24 hours a day 7 days a week

To close the filter chamber



Replace the gasket



Position the indentation in the cover into the center of the HEPA filter



Replace the 4 screws and tighten



Turn the Airpura back onto its casters

Feel the difference breathing clean air makes
to your health


Filter Maintenance and Replacement

The Pre-Filter

- Can be vacuumed from the exterior of the unit once a month or more often.
- Should be replaced at least after 12 months of use

To vacuum the pre-filter

- Use the brush attachment on your vacuum cleaner
- Vacuum slowly around the mesh surface of the filter chamber

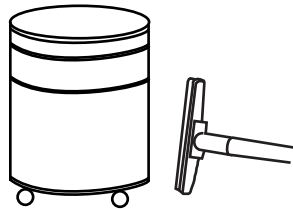

The Hi-C Carbon Filter

- Should be changed as needed in heavy applications and at least every 4-6 months in normal use.

The HEPA Filter

- Should be replaced at least every 5 years of normal use

To open the filter chamber

